

MAKESIGNS.COM

Signicade Sticker - Installation Instructions


What you'll need:
-Isopropyl Alcohol
-Towel

1. Clean the application area of the signicade with isopropyl alcohol. Make sure the area is completely dry. **2.**

2. Pull the top third of the material off the backing and gently apply it to the signicade at the top while checking your alignment. There should be a .25" gap around the outside of the sticker.

3. With your fist or hand, starting from the top down, work your way down the sticker in a back and forth motion across the entire sticker to apply it to the signicade. This will ensure minimal air bubbles in the application. If bubbles do occur, pull the material back and reapply that area correctly.

4. As you're applying the sticker, pull the backing off in small increments to minimize air bubbles. Finish off the application by making sure all edges and corners are adhered properly.

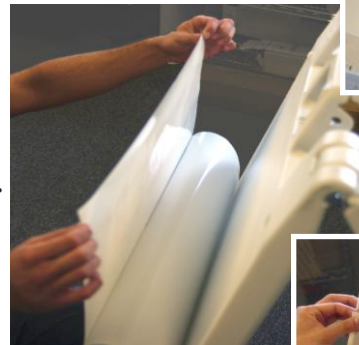

3.

4.



*Temperature of the intended surface should be between 45 and 90 degrees Fahrenheit for best results